



Repairing EPSON B-510DN Error 0xF2 or 0xF3

Repairing EPSON B-510DN Error 0xF2 or 0xF3

Written By: delete



INTRODUCTION

Stalled printer for error 0xF2 or 0xF3

The error compare when there are some problem with encoder with roller to feed paper.

Step 1 — Repairing EPSON B-510DN Error 0xF2 or 0xF3



- Remove the external component
- Remove all component
- Remove Ink tanks

Step 2



- remove windows

Step 3




- Remove Rear component

Step 4



- Dismount Ink lever

Step 5

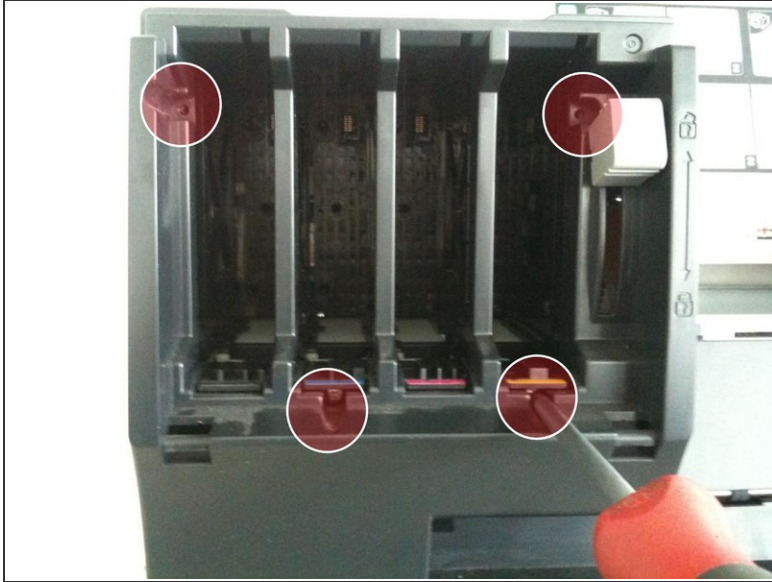

- Remove Front panel screws

Step 6





- Dismount LCD Panel

Step 7




- Remove front pannel

Step 8

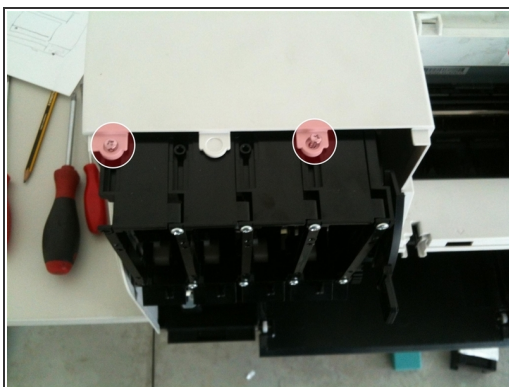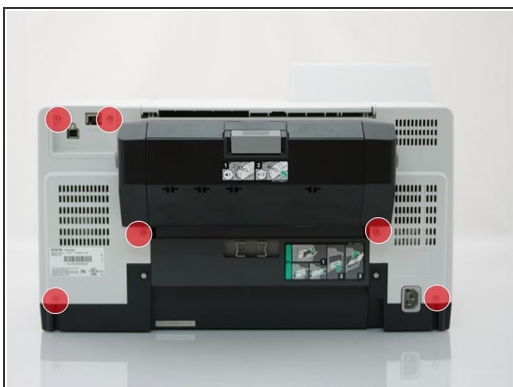

- Remove back panel screws

Step 9

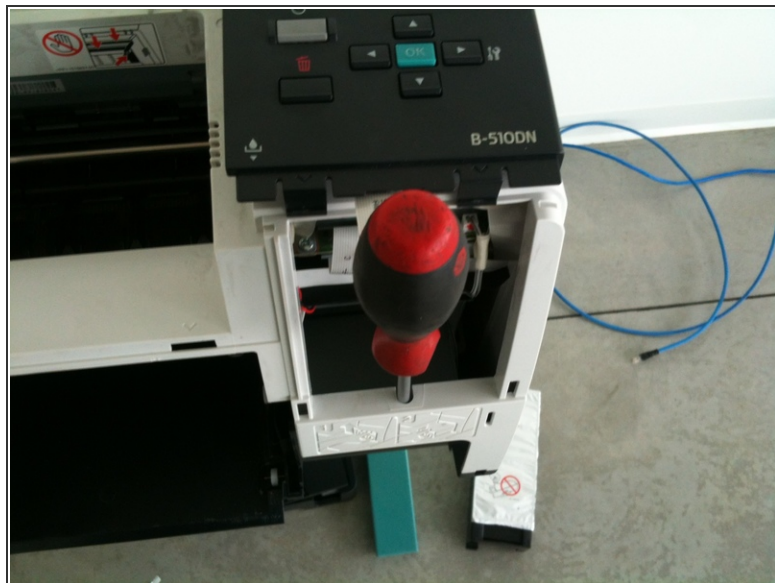

- Other back panel screw (you find i back the lcd display)

Step 10




- Remove back ethernet panel

Step 11






- Remove main back panel, make attention to lcd display

Step 12

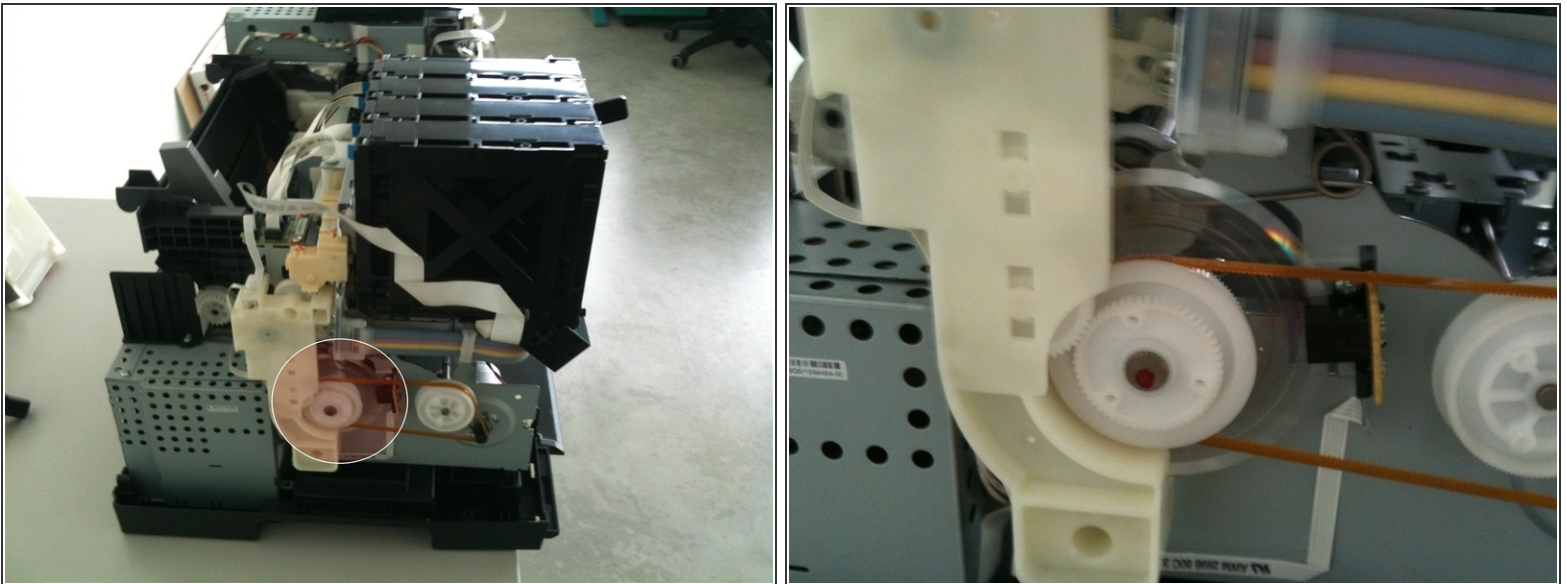


- More gently clean left encoder with a dry cleanex

Step 13

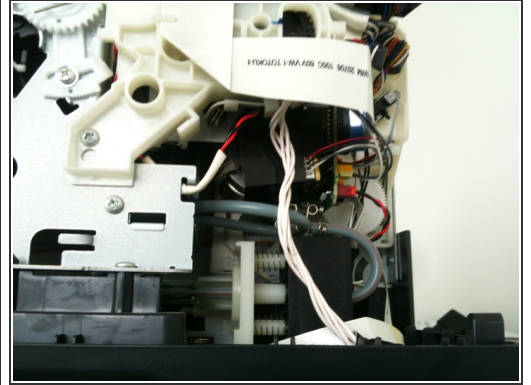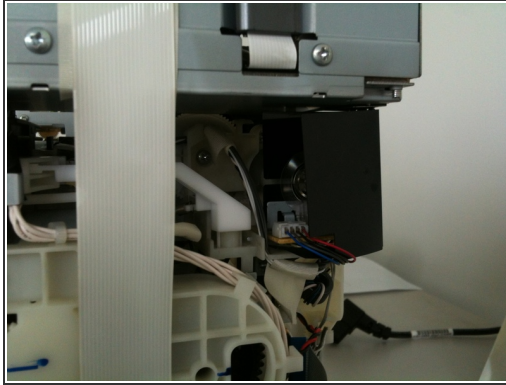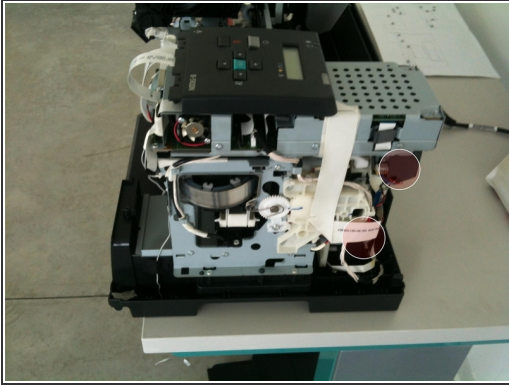


- More gently, Clean right encoder with a dry cleanex

Step 14

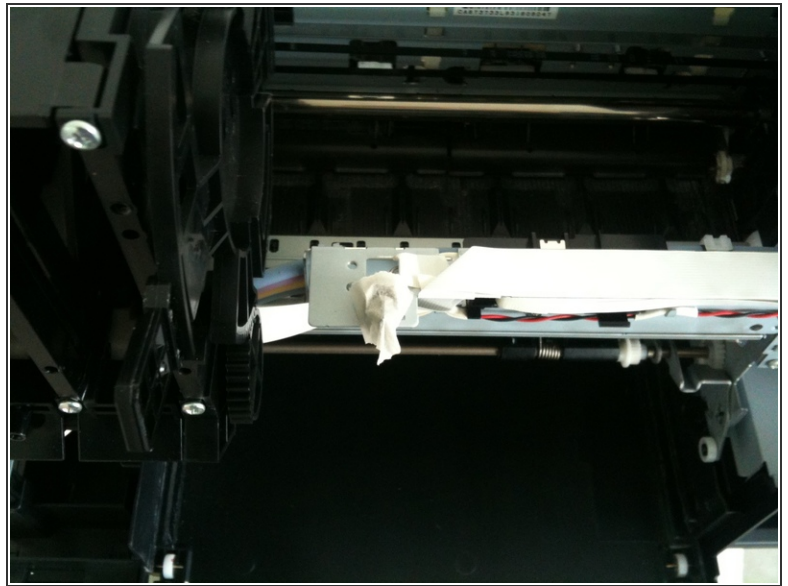

- If you want test the printer you need insert paper, and cover 2 switch with paper scotch.

Step 15

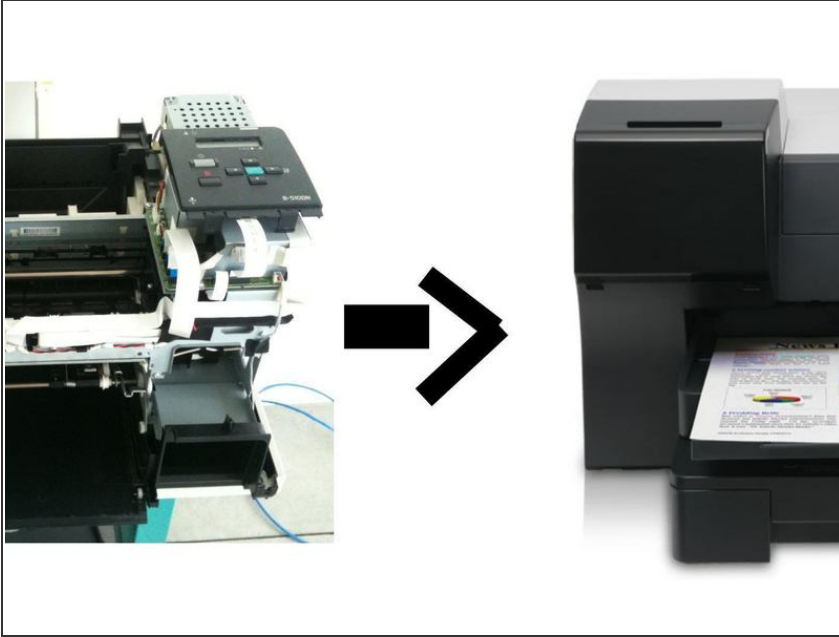

- Remount the printer (but before remove the scotch if you have used it) following in reverse mode the previous instructions.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:59:18 AM.